


Configure Star TSP Series Printers


- 1) In UniversalPOS, configure the printer as a Windows Printer and select the appropriate Epson Printer Definition.
- 2) Install the printer in Windows using the Star Installation Software for your printer. Do not use Generic Text Only as the driver. Use the driver the installation utility selects.
- 3) Install the ***futurePRNT Configuration Utility*** (usually installed when the device driver is installed). Once installed, open the configuration utility, located in All Programs under the Start Menu.





4) As soon as the Configuration Utility opens, ***select ESC/POS Mode***, and click OK.

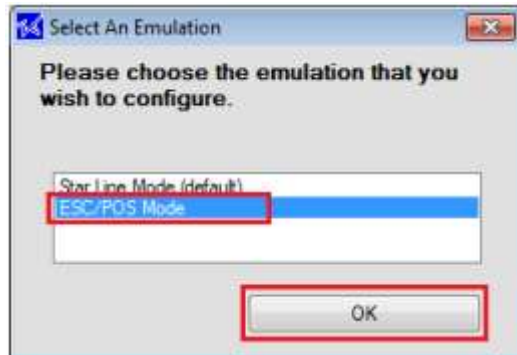

5) In the Configuration Menu, ***select General Settings***.

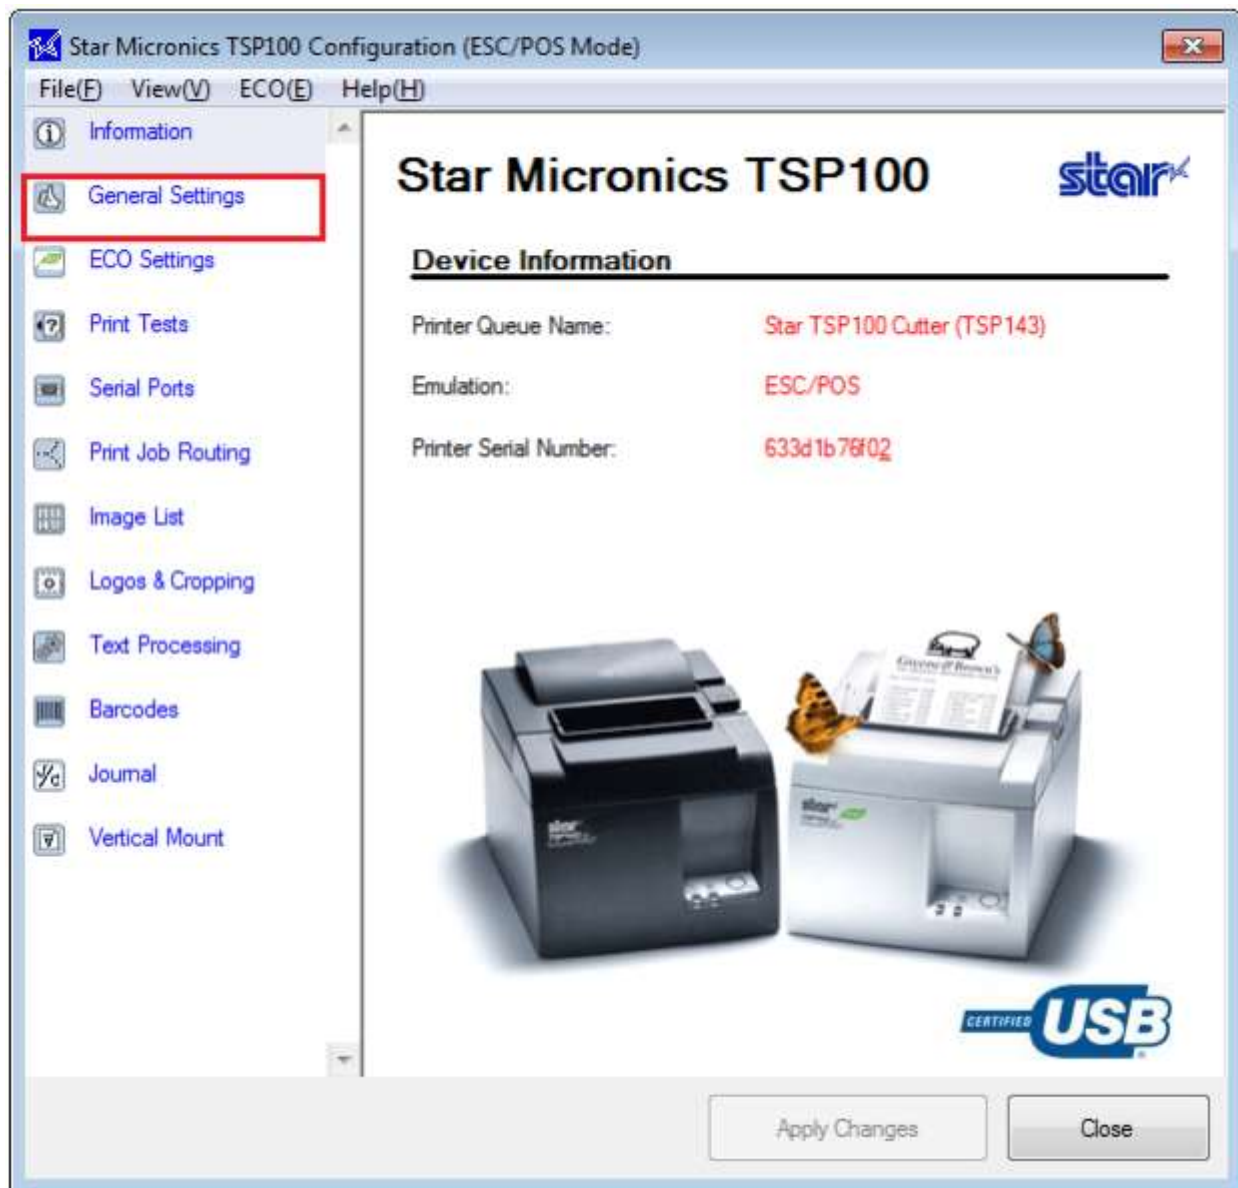

6) Under **General Settings**, adjust the following settings as shown in the indicated red outlined screen-caps.

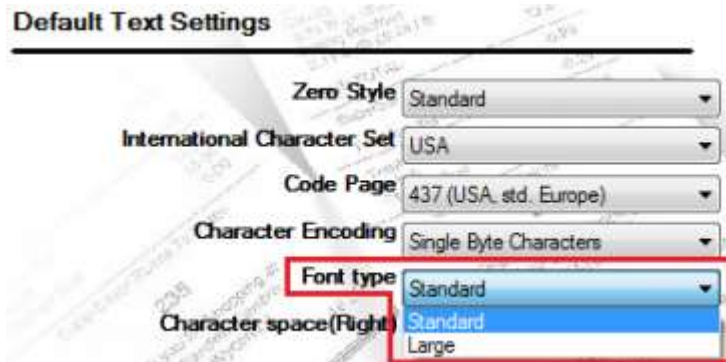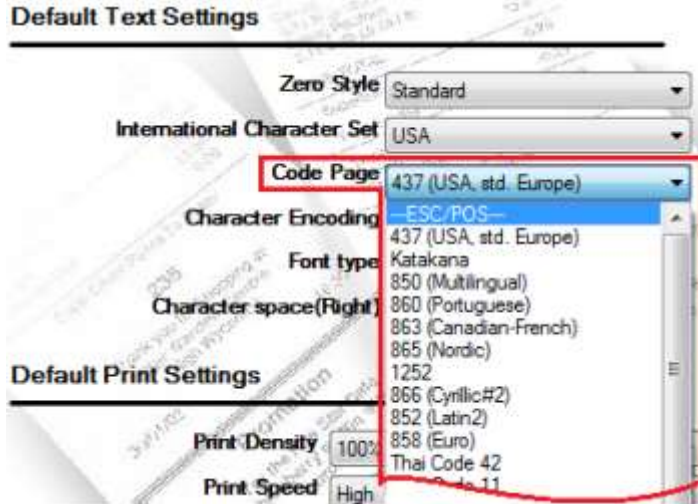

Default Print Settings

Print Density	100%
Print Speed	High
Print Width	72mm
Characters/Line (fontA)	42 char.(ESC/POS compatible)
Resolution Pitch	42 char.(ESC/POS compatible) 48 char.
Automatic Retry	Enable


Default Print Settings

Print Density	100%
Print Speed	High
Print Width	72mm
Characters/Line (fontA)	42 char.(ESC/POS compatible)
Resolution Pitch	ESC/POS compatible
Automatic Retry	Star standard ESC/POS compatible

7) **Apply** the changes.

Apply Changes	Close
---------------	-------

8) In the left side panel, **select *Print Job Routing***, and check the box that says ***Enable ESC/POS Routing***, and apply the changes.

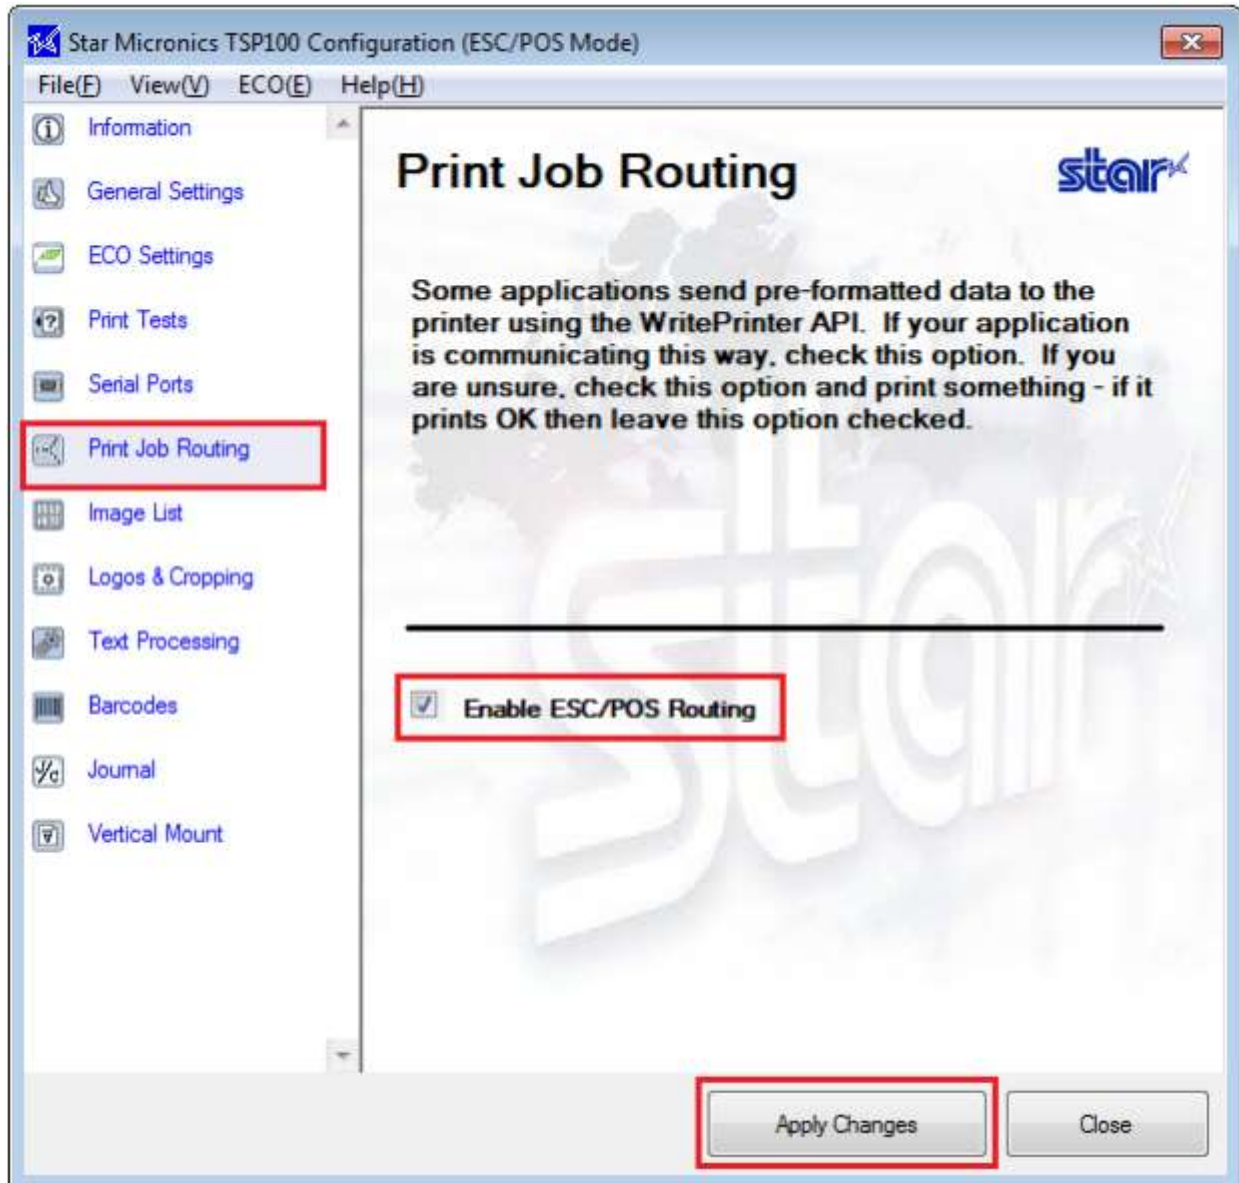

Your *Star Micronics* printer should now be setup in ESC/POS (Epson Emulation) mode.