


If the PLU is in KG and your scale is in LB you will get error.

If the PLU is in LB and your scale is in KG you will get error.

If your PLU is in LB and the display is showing KG or If your PLU is in KG and the display is showing LB you will need to change the display top right to show the appropriate PLU KG or LB.

Here is how to switch between KG and LB.

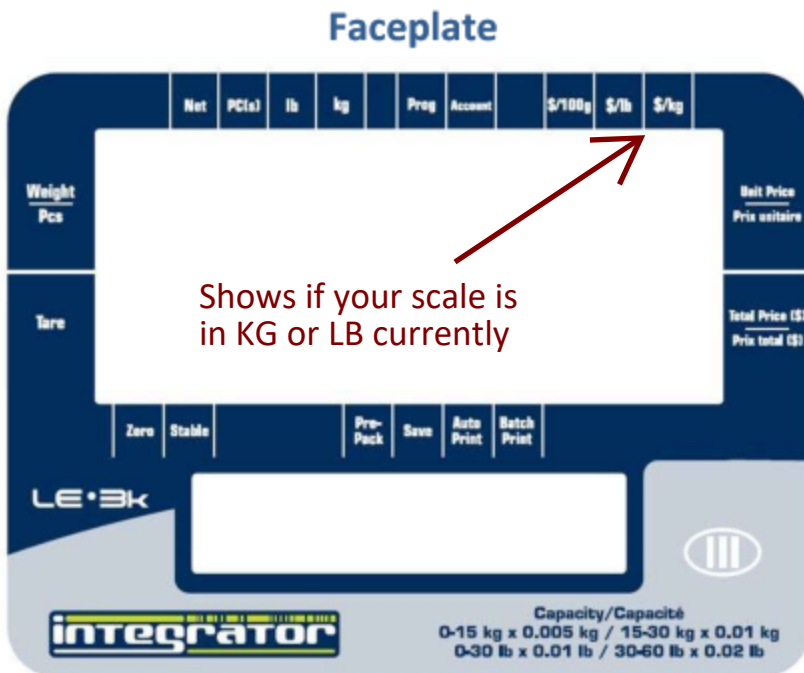

On your scale keypad press the kg/lb to select the appropriate PLU weight.

